


1. CENTER VALVE BOX OVER OPERATING NUT TO INSURE FREE VALVE OPERATION.
2. USE TELESCOPING VALVE BOX ON ALL VALVES.
3. SUPPORT VALVE BOX BOTTOM ON WELL COMPACTED BACKFILL. DO NOT ALLOW VALVE BOX TO REST ON ANY PORTION OF VALVE.
4. USE 6" D.I. RISER ON DEEP VALVE INSTALLATION. TELESCOPING VALVE BOXES ARE AVAILABLE FOR DEPTHS UP TO 6'10".

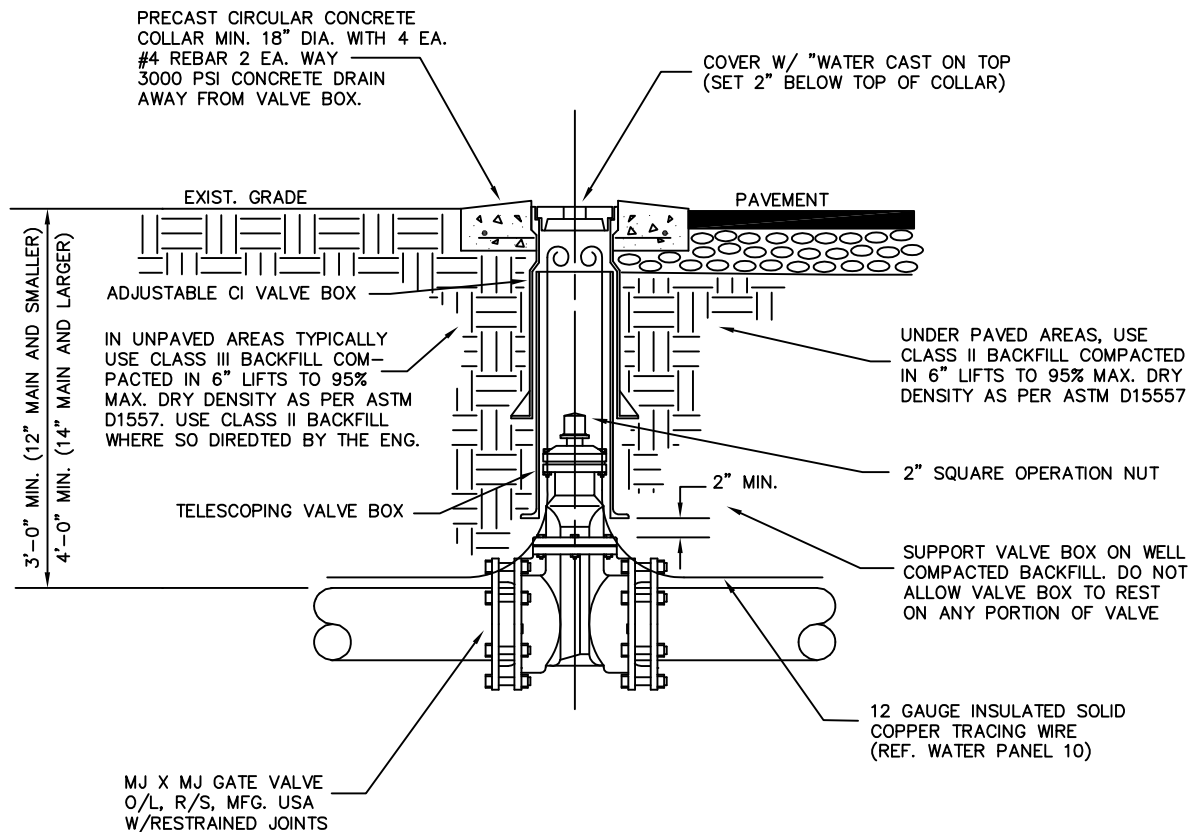

## *TYPICAL DETAIL*

# *VALVE AND VALVE BOX INSTALLATION*

NOT TO SCALE

## WATER PANEL 3

# BERKELEY COUNTY WATER AND SANITATION POTABLE WATER & SANITARY SEWER STANDARDS

REVISED 08/01/08